
Panel Wiring Diagram Model A2 RO TS

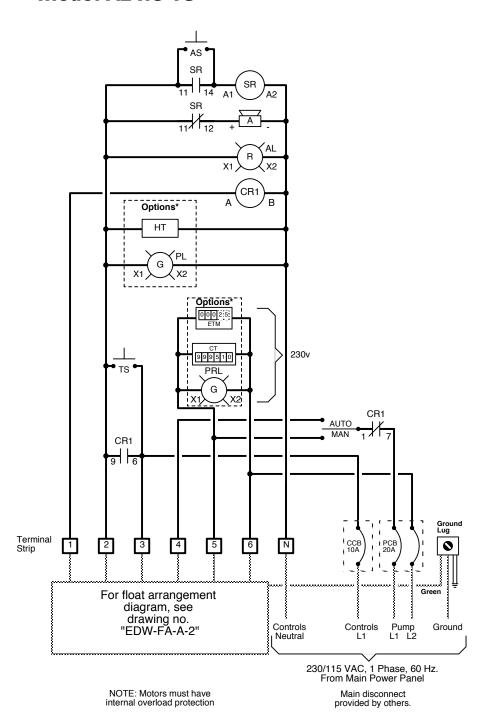

Simplex Operation

High Level Alarm: This float activates the alarm light and audible alarm when lifted. The audible alarm may be silenced by pressing the illuminated PUSH TO SILENCE button on the front of the control panel. The alarm light will remain on until the float is lowered.

Pump On & Off: This float turns on the pump when lifted and off when

Redundant Off & Low Level Alarm: This float turns off the pump when lowered. This float is a secondary off float which will operate if the Pump On & Off float fails. Pumping will be disabled in both the automatic and manual modes. This float also activates the alarm light and audible alarm. The audible alarm may be silenced by pressing the illuminated PUSH TO SILENCE button on the front of the control panel. The alarm light will remain on until the float is lifted.

Key

= Factory Wire = Field Wire

- - = Alternate Field Wire = Audio Alarm, 115 VAC

= Alarm Light

AS = Audio Silence Switch
CCB = Controls Circuit Breaker
CR1 = Redundant Off Relay

PCB = Pump Circuit Breaker SR = Silence Control Relay


= Alarm Test Switch

*Options

CT = Cycle Counter ETM = Elapsed Time Meter

= Heater

= Power Light PRL = Pump Run Light

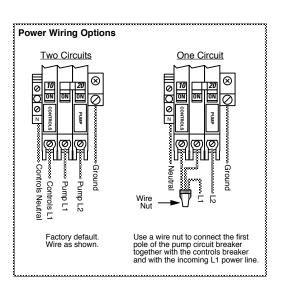



Orenco Systems® Incorporated

814 AIRWAY AVENUE

SUTHERLIN, OREGON

97479-9012

TELEPHONE:

(541) 459-4449

FACSIMILE:

(541) 459-2884