



Oreco Systems[®]
Incorporated

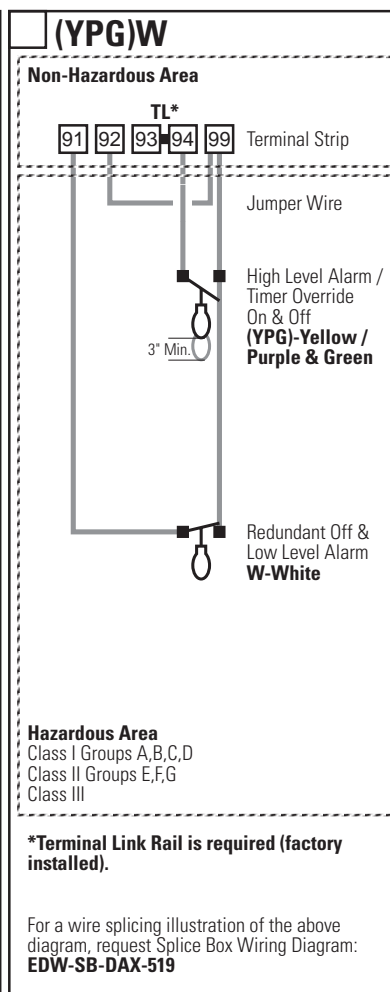
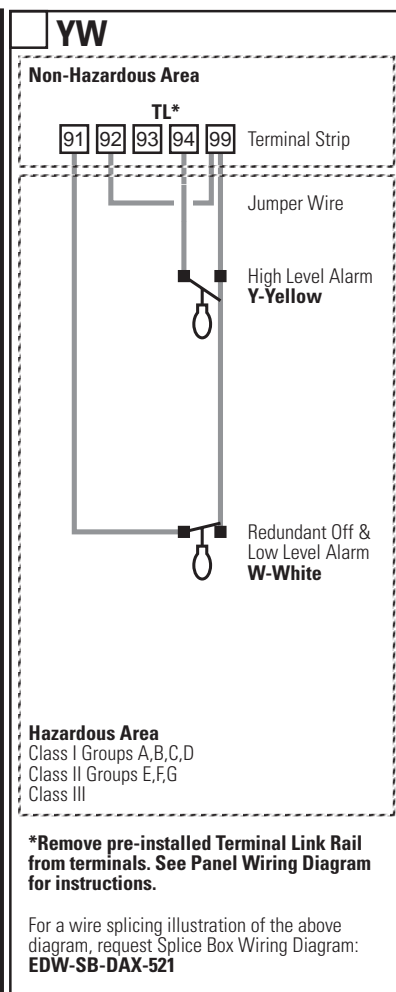
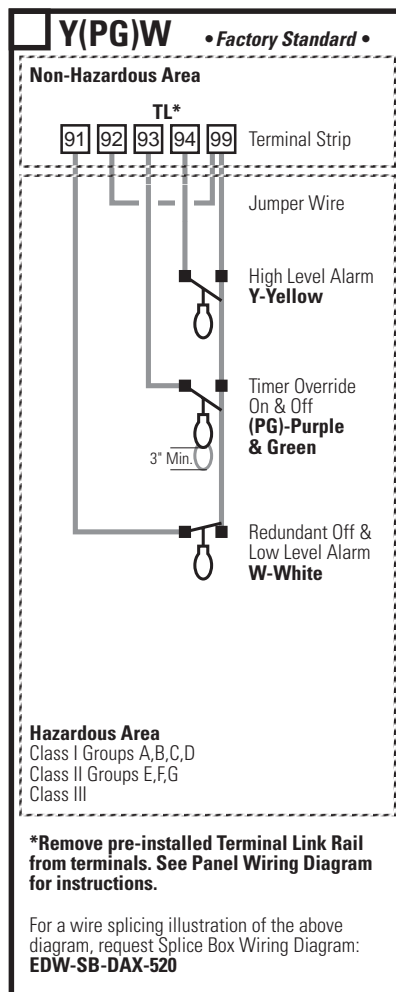
814 AIRWAY AVENUE
SUTHERLIN, OREGON
97479-9012

TELEPHONE:
(541) 459-4449




FACSIMILE:
(541) 459-2884

Float Arrangement Diagram

Check the appropriate box for the float function (color code) used in your system.



Float Types

-  **Typical Oreco float model: A**
Specs: contact - normally open differential - no minimum power rating - signal
-  **Typical Oreco float model: G**
Specs: contact - normally open differential - 3" min. power rating - signal
-  **Typical Oreco float model: T**
Specs: contact - normally closed differential - no minimum power rating - signal

Floats or equivalent devices must be purely resistive and non-energy storing

Notes:

Install in accordance with Art. 504 of the National Electric Code

Maximum cable length from panel to float is 2,000 ft.

Control Panel Series

DAX IR2 PT RO

For use in recirculating systems.

Drawing No.

EDW-FA-DAX-505

EDW-FA-DAX-505
Rev 3.0 © 01/01/08