

# Float Arrangement Diagram




**Oreco Systems®**  
Incorporated

814 AIRWAY AVENUE  
SUTHERLIN, OREGON  
97479-9012

TELEPHONE:  
(541) 459-4449

FACSIMILE:  
(541) 459-2884

Check the appropriate box for the float function (color code) used in your system.

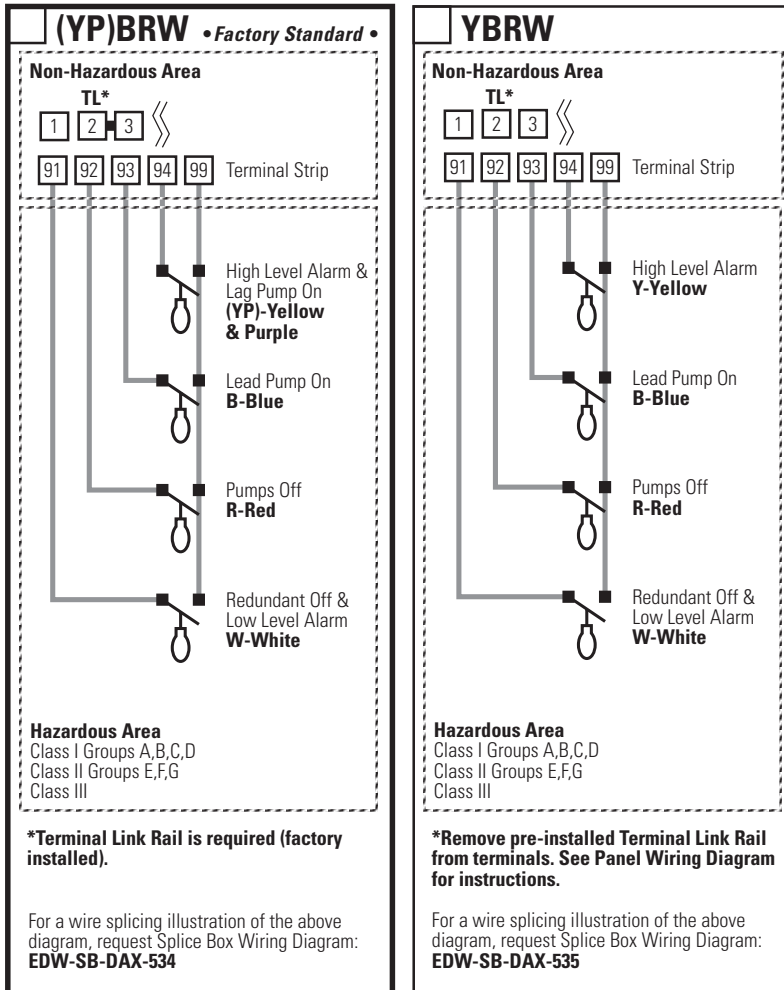

## Float Types



■ **Typical Oreco float model: A**  
**Specs:** contact - normally open  
 differential - no minimum  
 power rating - signal

Floats or equivalent devices  
 must be purely resistive  
 and non-energy storing

## Notes:

Install in accordance with Art. 504  
 of the National Electric Code

Maximum cable length from panel  
 to float is 2,000 ft.

Control Panel Series

**MVP-DAX IR2 DM (Demand dose)**

Drawing No.

**EDW-FA-DAX-535**

EDW-FA-DAX-535  
 Rev 1.0 © 03/08/13