

Float Arrangement Diagram




Oreco Systems®
Incorporated

814 AIRWAY AVENUE
SUTHERLIN, OREGON
97479-9012

TELEPHONE:
(541) 459-4449

FACSIMILE:
(541) 459-2884

Check the appropriate box for the float function (color code) used in your system.

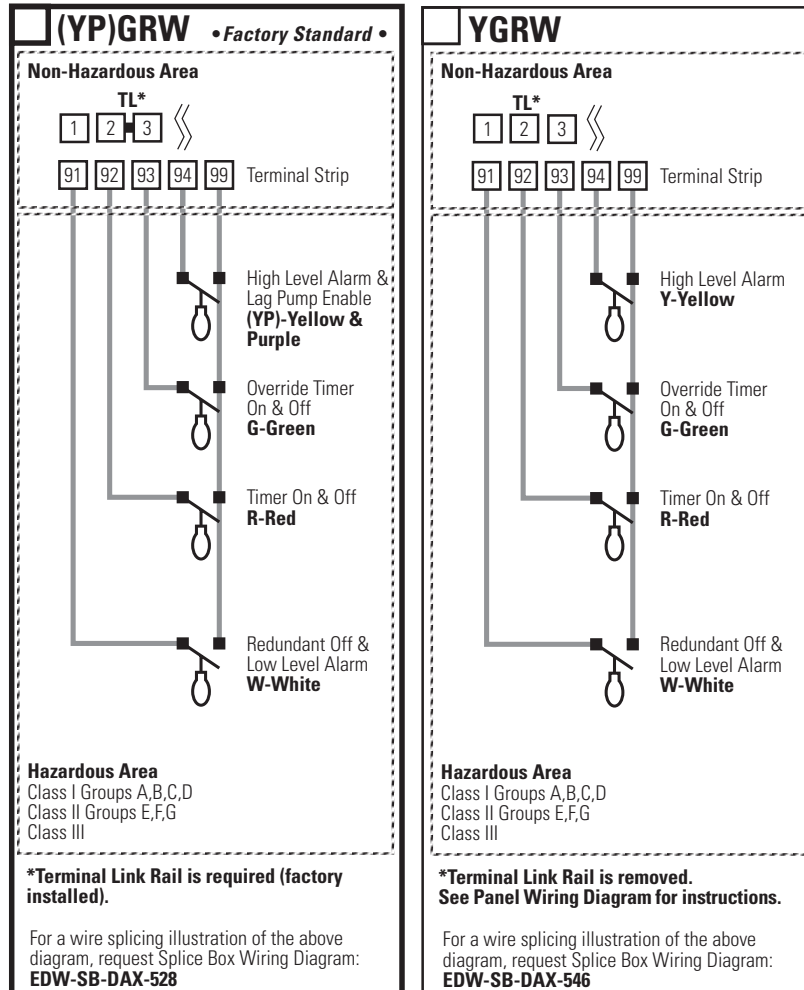

Float Types

- **Typical Oreco float model: A**
Specs: contact - normally open differential - no minimum power rating - signal
- Floats or equivalent devices must be purely resistive and non-energy storing

Notes:

Install in accordance with Art. 504 of the National Electric Code

Maximum cable length from panel to float is 2,000 ft.

Control Panel Series

MVP-DAX IR2 DM (Timed dose)

Drawing No.

EDW-FA-DAX-536

EDW-FA-DAX-536
Rev 1.0 © 03/08/13