


Float Arrangement Diagram

Check the appropriate box for the float function (color code) used in your system.

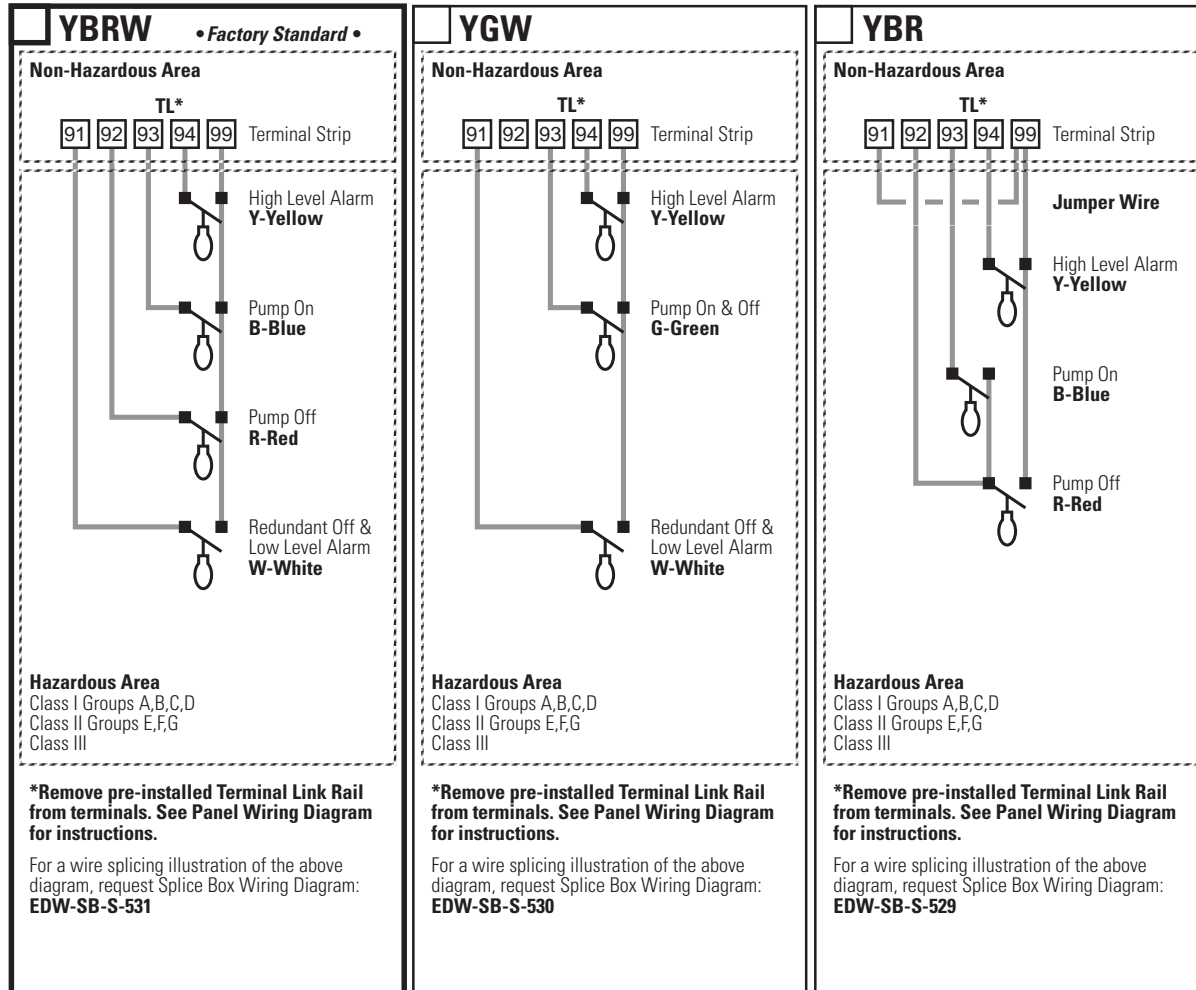


Oreco Systems[®]
Incorporated

814 AIRWAY AVENUE
SUTHERLIN, OREGON
97479-9012

TELEPHONE:
(541) 459-4449
FACSIMILE:
(541) 459-2884

Float Types

 **Typical Oreco float model: A**
Specs: contact - normally open differential - no minimum power rating - signal

Floats or equivalent devices must be purely resistive and non-energy storing

Notes:

Install in accordance with Art. 504 of the National Electric Code

Maximum cable length from panel to float is 2,000 ft.

Control Panel Series

MVP-S IR2 DM (demand dose)

Drawing No.

EDW-FA-S-517

EDW-FA-S-517
Rev 1.0 © 12/22/09