



Oreco Systems®
Incorporated


814 AIRWAY AVENUE
SUTHERLIN, OREGON
97479-9012

TELEPHONE:
(541) 459-4449

FACSIMILE:
(541) 459-2884

Float Arrangement Diagram

Check the appropriate box for the float function (color code) used in your system.

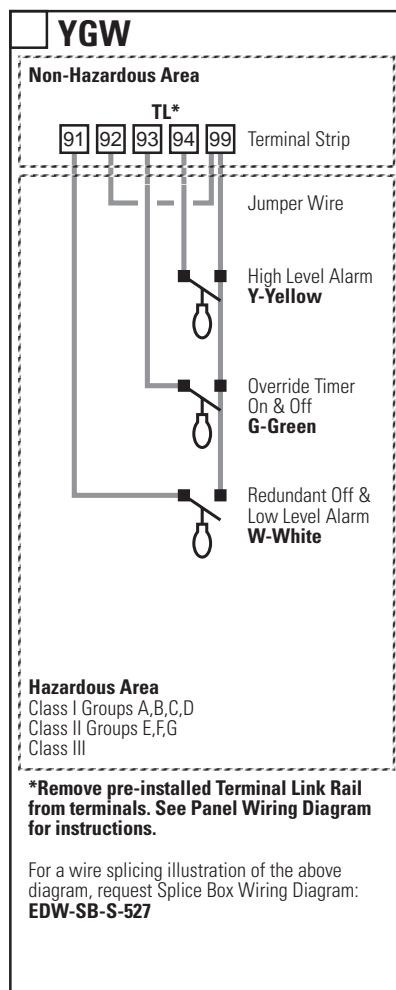

Float Types



■ **Typical Oreco float model: A**

Specs: contact - normally open
differential - no minimum
power rating - signal

Floats or equivalent devices
must be purely resistive
and non-energy storing

Notes:

Install in accordance with Art. 504
of the National Electric Code

Maximum cable length from panel
to float is 2,000 ft.

Important: In recirculating systems, this drawing replaces drawing no. "EDW-FA-S-518".

Control Panel Series

MVP-S IR2 DM (recirc)

For use in recirculating systems.

Drawing No.

EDW-FA-S-519

EDW-FA-S-519
Rev 1.0 © 12/22/09