




Oreco Systems®
Incorporated

814 AIRWAY AVENUE
SUTHERLIN, OREGON
97479-9012


TELEPHONE:
(541) 459-4449
FACSIMILE:
(541) 459-2884

Float Arrangement Diagram

Check the appropriate box for the float function (color code) used in your system.

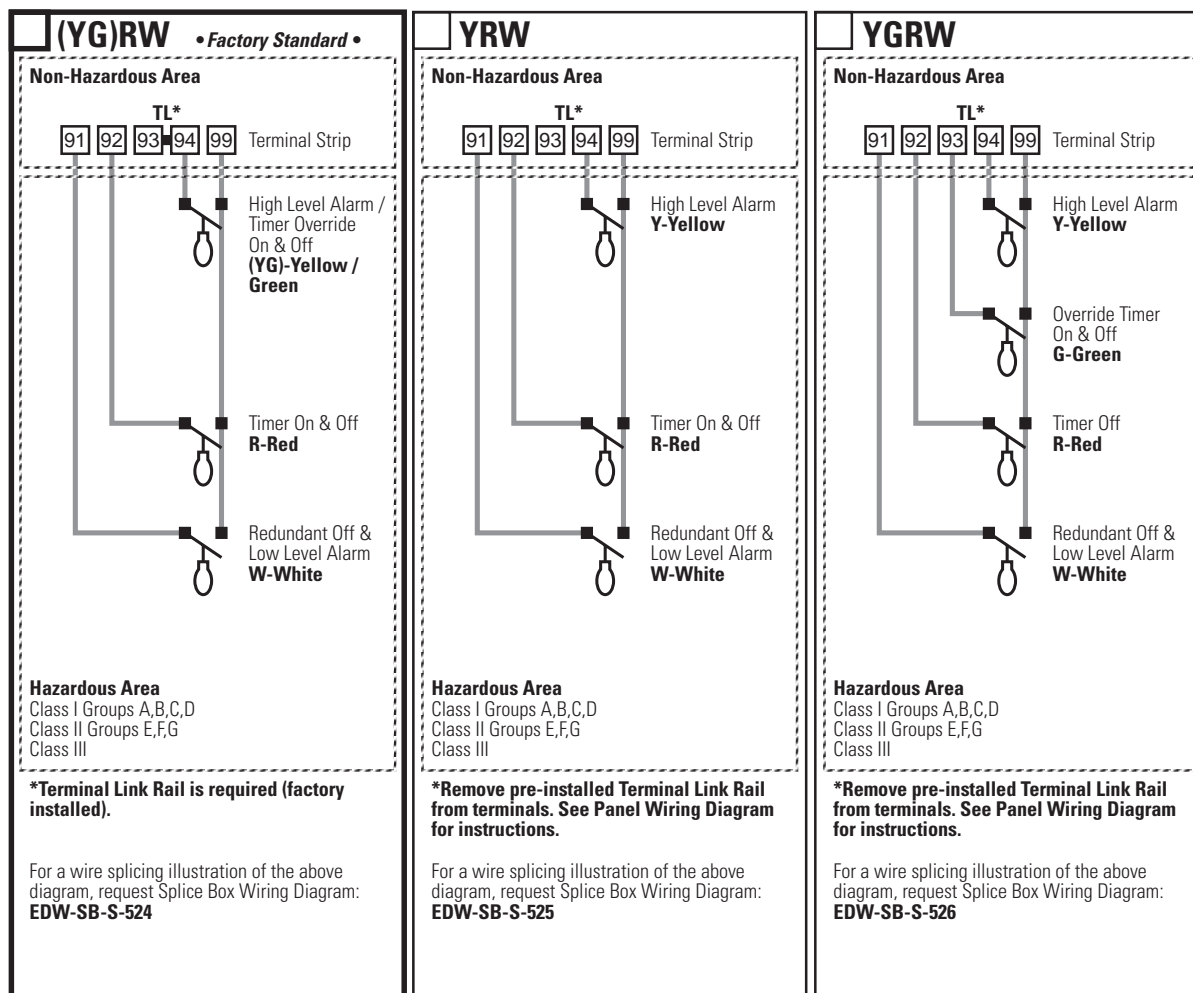

Float Types

-  **Typical Oreco float model: A**
- Specs:** contact - normally open differential - no minimum power rating - signal
- Possible substitutions:** B,C,D
- Floats or equivalent devices must be purely resistive and non-energy storing

Notes:

Install in accordance with Art. 504 of the National Electric Code

Maximum cable length from panel to float is 2,000 ft.

Control Panel Series

MVP-S IR2 PT R0

Drawing No.

EDW-FA-S-511

EDW-FA-S-511
Rev 3.0 © 01/01/08