
 


Float Arrangement Diagram

Check the appropriate box for the float function (color code) used in your system.

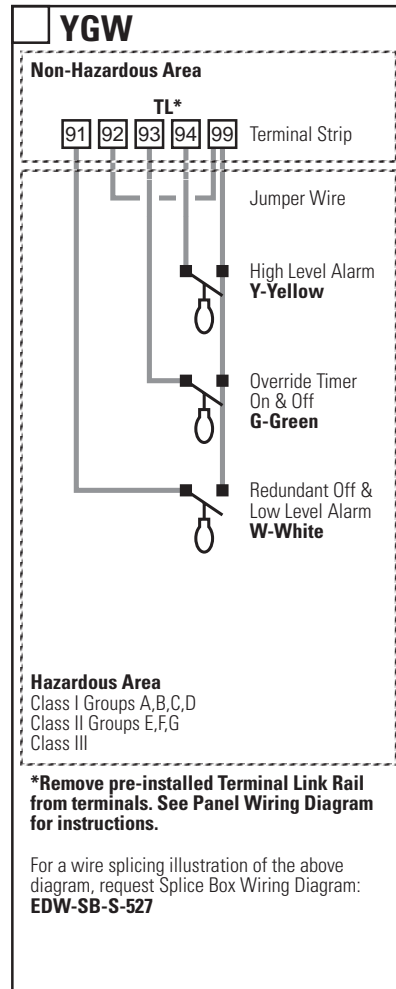

Float Types



Possible substitutions: B,C,D

Floats or equivalent devices must be purely resistive and non-energy storing

Notes:

Install in accordance with Art. 504 of the National Electric Code

Maximum cable length from panel to float is 2,000 ft.



Orenco Systems®
Incorporated

814 AIRWAY AVENUE
SUTHERLIN, OREGON
97479-9012

TELEPHONE:
(541) 459-4449

FACSIMILE:
(541) 459-2884

Important: In recirculating systems, this drawing replaces drawing no. "EDW-FA-S-511".

Control Panel Series

MVP-S IR2 PT RO

For use in recirculating systems.

Drawing No.

EDW-FA-S-512

EDW-FA-S-512
Rev 3.0 © 01/01/08