

Float Arrangement Diagram




Oreco Systems®
Incorporated

814 AIRWAY AVENUE
SUTHERLIN, OREGON
97479-9012

TELEPHONE:
(541) 459-4449
FACSIMILE:
(541) 459-2884

Check the appropriate box for the float function (color code) used in your system.

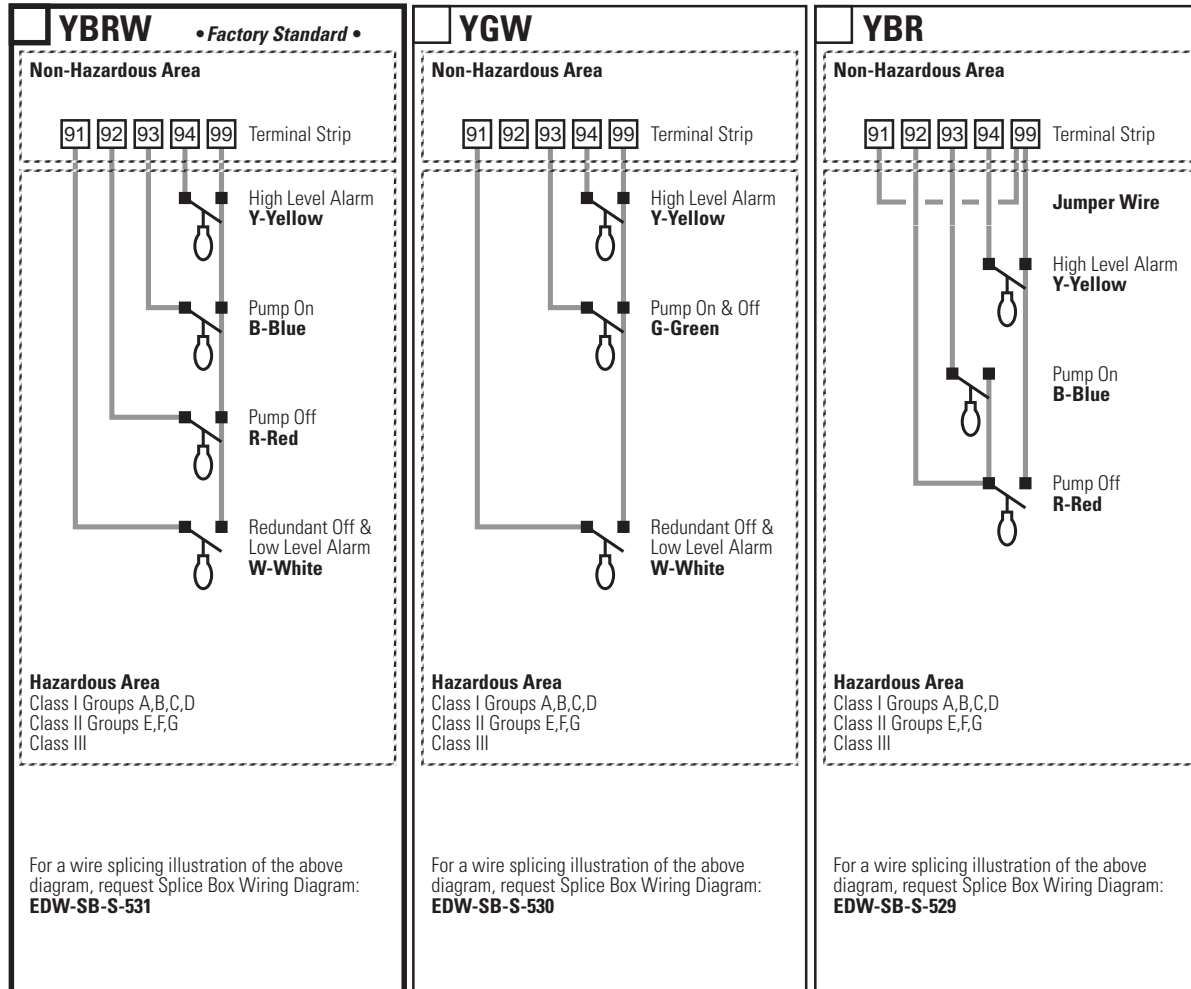

Float Types

Typical Oreco float model: A
Specs: contact - normally open differential - no minimum power rating - signal

Floats or equivalent devices must be purely resistive and non-energy storing

Notes:

Install in accordance with Art. 504 of the National Electric Code

Maximum cable length from panel to float is 2,000 ft.

Control Panel Series

MVP-S IR2 RO

Drawing No.

EDW-FA-S-515

EDW-FA-S-515
Rev 4.0 © 1/1/08