


# Float Arrangement Diagram



**Oreco Systems®**  
Incorporated

Check the appropriate box for the float function (color code) used in your system.

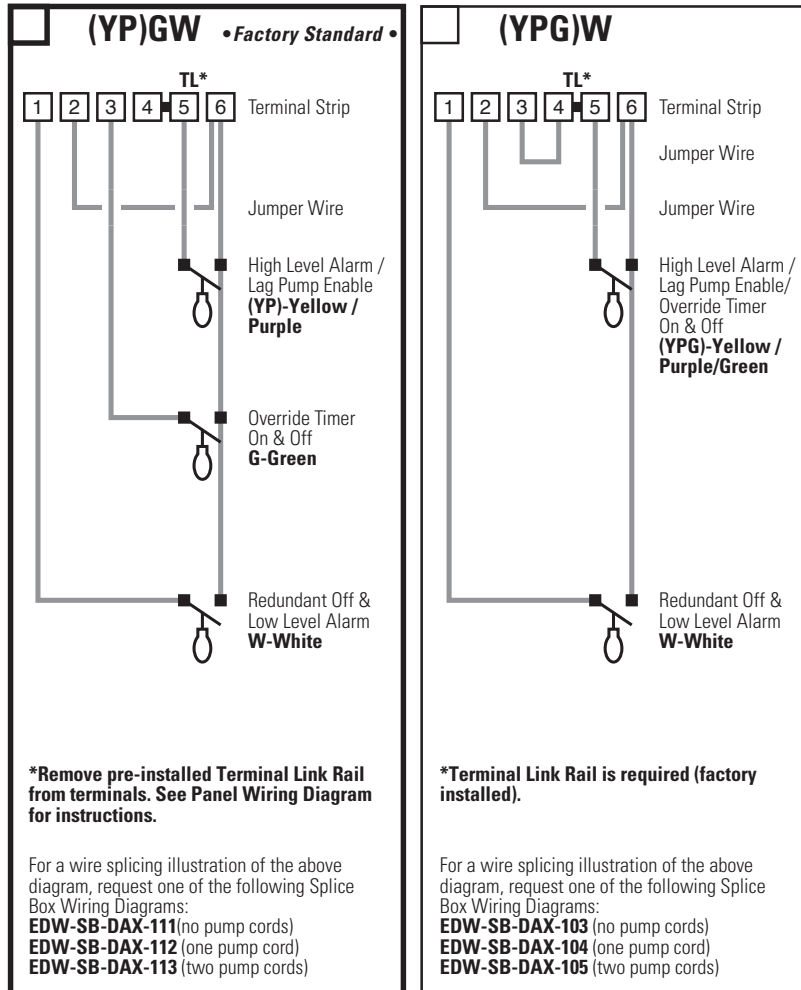

**Float Types**

■ Typical Oreco float model: A

■ Specs: contact - normally open  
differential - no minimum  
power rating - signal

■ Possible substitutions: B,C,D

814 AIRWAY AVENUE  
SUTHERLIN, OREGON  
97479-9012

TELEPHONE:  
(541) 459-4449

FACSIMILE:  
(541) 459-2884

Control Panel Series

**MVP-DAX PT RO**

For use in recirculating systems.

Drawing No.

**EDW-FA-DAX-14**

EDW-FA-DAX-14  
Rev 2.4 ©01/14/99