

Float Arrangement Diagram



Oreco Systems®
Incorporated

Check the appropriate box for the float function (color code) used in your system.

<input type="checkbox"/> (YG)RW • <i>Factory Standard</i> • <p>*Terminal Link Rail is required (factory installed).</p> <p>For a wire splicing illustration of the above diagram, request Splice Box Wiring Diagram: EDW-SB-S-15</p>	<input type="checkbox"/> YRW <p>*Remove pre-installed Terminal Link Rail from terminals. See Panel Wiring Diagram for instructions.</p> <p>For a wire splicing illustration of the above diagram, request Splice Box Wiring Diagram: EDW-SB-S-14</p>	<input type="checkbox"/> YGRW <p>*Remove pre-installed Terminal Link Rail from terminals. See Panel Wiring Diagram for instructions.</p> <p>For a wire splicing illustration of the above diagram, request Splice Box Wiring Diagram: EDW-SB-S-16</p>
--	--	---

Float Types

- Typical OSI float model: A**
Specs: contact - normally open differential - no minimum power rating - signal
Possible substitutions: B,C,D

- Typical OSI float model: B**
Specs: contact - normally open differential - 3" min. power rating - signal
Possible substitutions: C,D

- Typical OSI float model: T**
Specs: contact - normally closed differential - no minimum power rating - signal

814 AIRWAY AVENUE
SUTHERLIN, OREGON
97479-9012

TELEPHONE:
(541) 459-4449

FACSIMILE:
(541) 459-2884

Control Panel Series

S PT RO

Drawing No.

EDW-FA-S-4

EDW-FA-S-4
Rev 2.1 ©12/18/98