

Float Arrangement Diagram

Check the appropriate box for the float function (color code) used in your system.

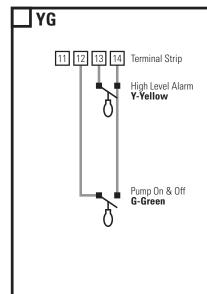

For a wire splicing illustration of the above

diagram, request Splice Box Wiring Diagram:

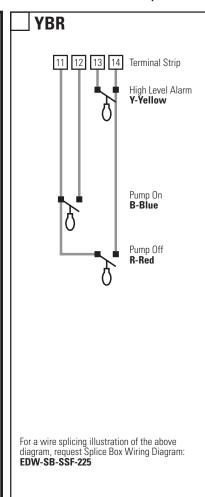

Float Types

■ Typical Orenco float model: A Specs: contact - normally open differential - no minimum power rating - signal

Possible substitutions: B.C.D.



814 AIRWAY AVENUE

SUTHERLIN, OREGON

97479-9012

TELEPHONE:

(541) 459-4449

FACSIMILE:

(541) 459-2884

Important: A high level condition in the sand filter will disable the septic tank pump in automatic mode.

Control Panel Series Drawing No.

MVP-SSF

EDW-SB-SSF-226

For use in two pump systems, sand filter side.

EDW-FA-SSF-215

EDW-FA-SSF-215 Rev 1.2 © 08/28/02