


MODEL 112 CONTROL PANEL

Single Phase, Simplex Motor Contactor Control

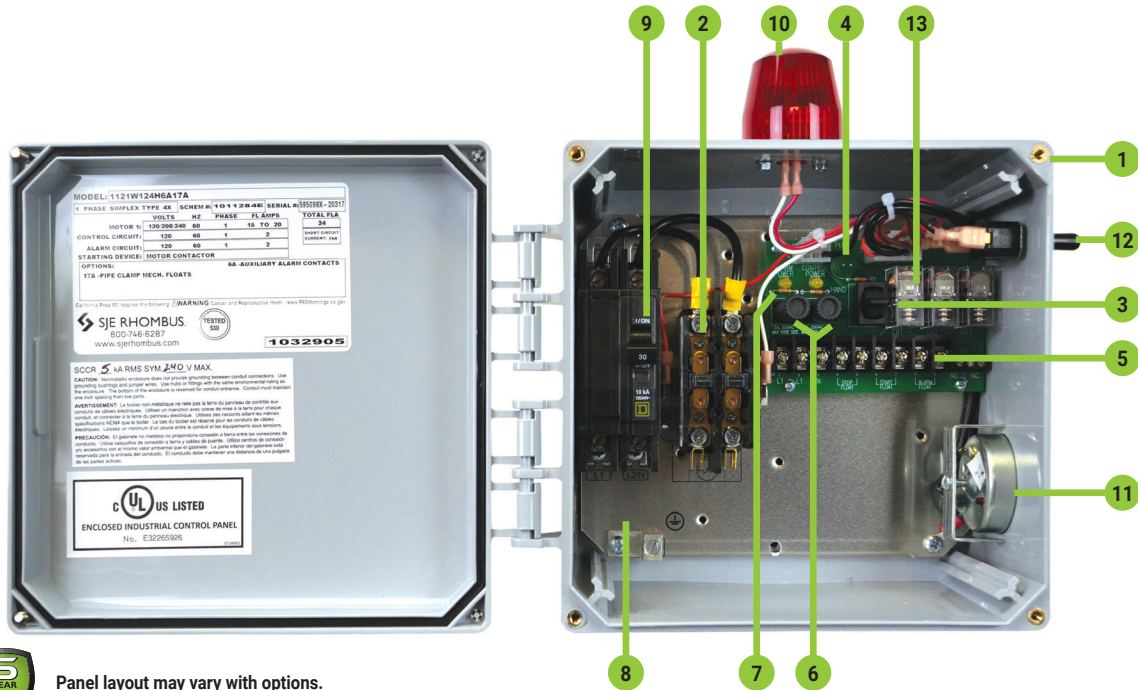

Panel layout may vary with options.

The Model 112 control panel provides a reliable means of controlling one 120, 208, or 240 VAC single phase pump in pump chambers, sump pump basins, irrigation systems and lift stations. Two control switches activate a magnetic motor contactor to turn the pump on and off. If an alarm condition occurs, an additional alarm switch activates the audio/visual alarm system.

OPTIONAL FEATURE

- 34" (86.36 cm) Panel Mounting Post (Factory Installed). Includes Simplex Installation Kit (Enclosure upsized to 10" x 8" x 6" (25.4 x 20.32 x 15.24 cm). Max. Enclosure size 14" x 12" x 6" (35.56 x 30.48 x 15.24 cm)

COMPONENTS

1. Choice of NEMA 1 (steel for indoor use), or NEMA 4X (ultraviolet stabilized thermoplastic with removable mounting feet for outdoor or indoor use) enclosure; enclosure measures 8 x 8 x 4 inches (20.32 x 20.32 x 10.16 cm)
2. Magnetic motor contactor
3. HOA switch for manual pump control (mounted on circuit board)
4. Green pump run indicator light (mounted on circuit board)
5. Float switch terminal block (mounted on circuit board)
6. Alarm and control fuses (mounted on circuit board)
7. Alarm and control power indicators (mounted on circuit board)
8. Ground lug
9. Circuit breaker (optional)
10. Red LED beacon provides 360° visual check of alarm condition - Note: NEMA 1 style utilizes a door mounted indicator in lieu of a beacon
11. Alarm horn provide audible warning of alarm condition (83 to 85 decibel rating) - Note: NEMA 1 style utilizes an internally mounted buzzer in lieu of horn
12. Exterior alarm test/normal/silence switch allows horn to be silenced in an alarm condition; alarm automatically resets once alarm condition has been cleared
13. Horn silence relay (mounted on circuit board)

Note: Options, voltage, and amp range selected may change enclosure size and component layout.

Note: Other options available.

Note: Schematic/Wiring Diagram and Pump Specification Label are located inside the panel.



Model 112 - Single phase, simplex motor contactor control.

112 CONTROL PANEL	ALARM PACKAGE	ENCLOSURE RATING	STARTING DEVICE	PUMP FULL LOAD AMPS	PUMP DISCONNECTS	FLOAT SWITCH APPLICATION	OPTIONS (LISTED BELOW)	
CONTROL PANEL	✓ 112	Single Phase Simplex					PRICING WORKSHEET	Model 112 Base Price _____
ALARM PACKAGE	0	Select Options or No Alarm Package						Alarm Package _____
ENCLOSURE RATING	I	Indoor, NEMA 1 (metal)						Enclosure Rating _____
	W	Weatherproof, NEMA 4X (engineered thermoplastic)						Starting Device _____
STARTING DEVICE	1	Magnetic Motor Contactor 120/208/240V						Pump Full Load Amps _____
	9	Magnetic Motor Contactor, 120V only						Pump Disconnects _____
PUMP FULL LOAD AMPS	0	0 - 7 FLA						Float Switch Application _____
	1	7 - 15 FLA						Total Options _____
	2	15 - 20 FLA						Enclosure Upsize _____
	3	20 - 30 FLA (Enclosure Upsize Required)						TOTAL LIST PRICE _____
PUMP DISCONNECTS	0	No Pump Disconnect						
	4	Circuit Breaker 120V (select STARTING DEVICE option 9 above)						
		Circuit Breaker 120/208/240V (select STARTING DEVICE option 1 above)						
FLOAT SWITCH APPLICATION	H	Floats - Pump Down (select Option 17 below)				with Alarm Package		
		Floats - Pump Up (select Option 17 below)				without Alarm Package		
	E	EZconnex® Float Switch System (select Option 33 or 34 below)				with Alarm Package		
						without Alarm Package		
	X	No Floats						

ENCLOSURE UPSIZE: If you selected 3 or more of the ♦ options or one ♦♦ option, add a one-time charge for enclosure upsize.

OPTIONS	DESCRIPTION	OPTIONS	DESCRIPTION
1A	Red Beacon Only / No Audio (must select Option 1E if floats included)	15A ♦♦	Control / Alarm Circuit Breaker
1C	Horn Only / No Visual (must select Option 1E if floats included)	16A	10' Cord in Lieu of 20' Cord (per Float)
1E	Alarm Float	16B	15' Cord in Lieu of 20' Cord (per Float)
3A	Alarm Flasher	16C	30' Cord in Lieu of 20' Cord (per Float)
3B ♦	Manual Alarm Reset	16D	40' Cord in Lieu of 20' Cord (per Float)
4A ♦♦	Redundant Off (must also select Option 4D if floats are required)	17A	SJE SignalMaster® / Pipe Clamp (per Float) - Mechanical
4B ♦♦	Red Redundant Off Indicator and Alarm (must also select Option 4A)	17B	SJE SignalMaster® / Externally Weighted (per Float) - Mechanical
4D	Redundant Off Float (must also select Option 4A and Option 17)	17C	Sensor Float® / Internally Weighted (per Float) - Mercury
5A ♦	Thermal Cutout/Heat Sensor Auto Reset (for pumps with thermal switch leads)	17D	Sensor Float® / Externally Weighted (per Float) - Mercury
		17E	Sensor Float® Mini / Pipe Clamp (per Float) - Mercury
5E ♦♦	Seal Failure Circuit & Red Indicator (2 wire)	17F	Sensor Float® Mini / Externally Weighted (per Float) - Mercury
6A	Auxiliary Alarm Contact, Form C	17J	Sensor Float® / Pipe Clamp (per Float) - Mercury
8A ♦	Elapsed Time Meter	19T	TOA (Test/Off/Automatic) Switch and Pump Run Light through Door Mounted
8C ♦	Event (Cycle) Counter		
9_A ♦♦	Pump Overload - Specify Amperage after Number 9 Followed by Letter "A" Example: 912A = 12 amp pump	19U	HOA (Hand/Off/Automatic) Switch and Pump Run Light through Door Mounted
			0 - 25 FLA
10E	Lockable Latch - NEMA 4X Lockable Latch - NEMA 1	19X	Door Mounted Pump Run Indicator
			25 - 30 FLA
10F ♦	Lightning Arrestor (must select pump circuit breaker)	21A	SJE PumpMaster® in Lieu of ON/OFF Switches - Mechanical
10K ♦	Anti-condensation Heater	21B	SJE PumpMaster® Plus in Lieu of ON/OFF Switches - Mechanical
10P ♦♦	Panel Mounting Post - Factory Installed, Includes Simplex Installation Kit (Enclosure Upsized to 10x8x6, Max 14x12x6)	21C	Super Single® in Lieu of ON/OFF Switches - Mercury
		21D	Double Float® in Lieu of ON/OFF Switches - Mercury
11C	Additional NEMA 1 Remote Alarm Panel (must select Option 6A)	21M	Double Float® Master in Lieu of ON/OFF Switches - Mechanical
11D	Additional NEMA 4X Remote Alarm Panel (must select Option 6A)	33D ■	EZconnex® 3-Port, 25', with 10' Floats (3) / Pipe Clamp
14B ♦♦	Main Disconnect (rotary style, mounted through door, non-fused, padlockable in the OFF position, door interlock in the ON position (must select Circuit Breaker)	33E ■	EZconnex® 3-Port, 50', with 10' Floats (3) / Pipe Clamp
		33G ■	EZconnex® 3-Port, 25', with 20' Floats (3) / Pipe Clamp
		33H ■	EZconnex® 3-Port, 50', with 20' Floats (3) / Pipe Clamp
		34D ■	EZconnex® 4-Port, 25', with 10' Floats (3) / Pipe Clamp, Sealing Plug
		34E ■	EZconnex® 4-Port, 50', with 10' Floats (3) / Pipe Clamp, Sealing Plug
		34G ■	EZconnex® 4-Port, 25', with 20' Floats (3) / Pipe Clamp, Sealing Plug
		34H ■	EZconnex® 4-Port, 50', with 20' Floats (3) / Pipe Clamp, Sealing Plug

■ EZconnex® mechanically-activated, narrow angle float switches with quick release connections

Part #	Pre-configured Panels for Easy Ordering
1019840	1121W114H17A
1020094	1121W114H6A17A