


Two Stage Split Case Centrifugal Pumps

Type 5260 Two Stage Split-Case Pumps

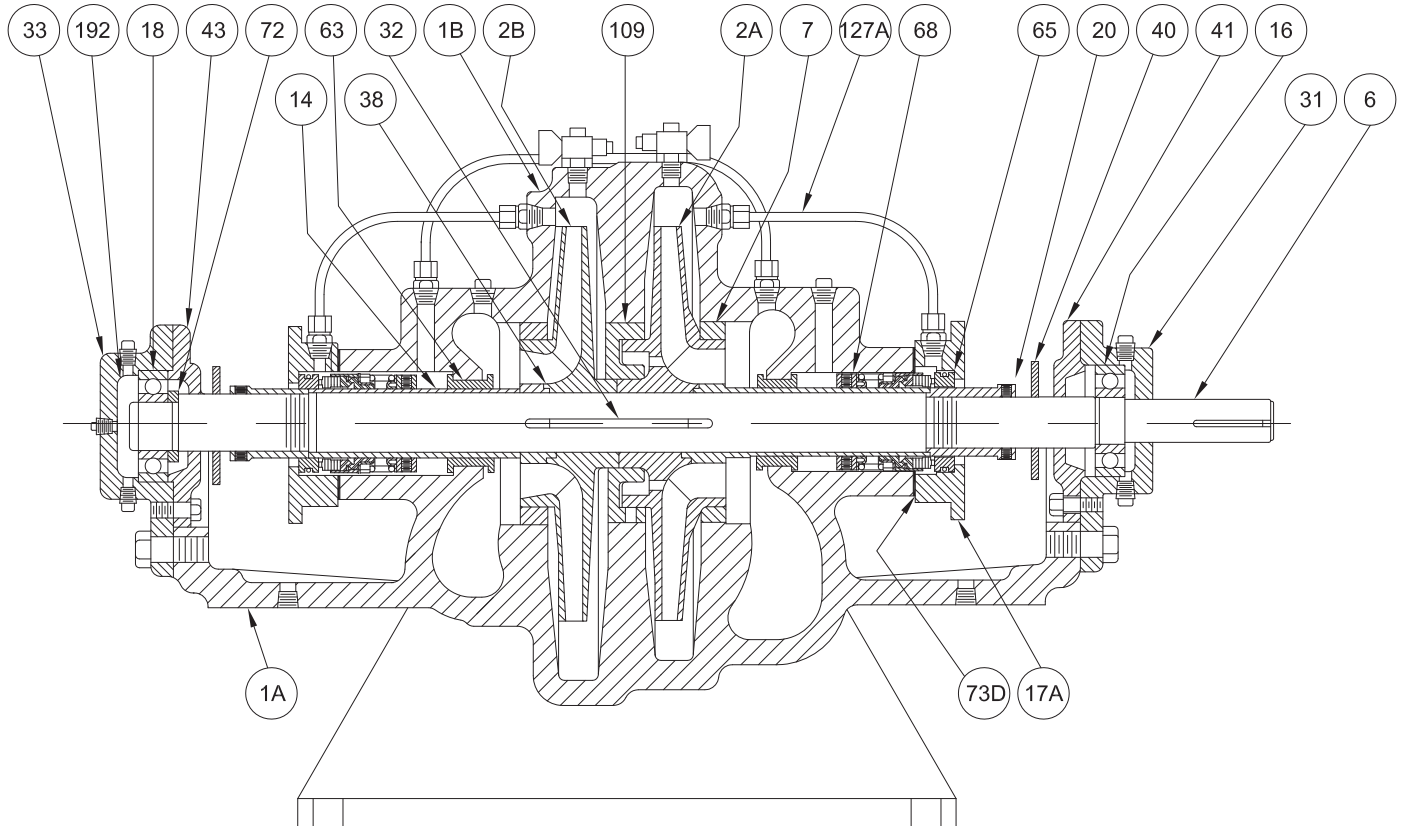

ITEM No.	DESCRIPTION
1A	Lower Half Casing
1B	Upper Half Casing
* 2A	Impeller (1st Stage)
* 2B	Impeller (2 nd Stage)
6	Shaft
* 7	Casing Ring
±* 8	Impeller Ring (Not Shown)
* 14	Shaft Sleeve
* 16	Ball Bearing (inboard)
17A	Seal Cap
* 18	Ball Bearing (outboard)
20	Shaft Sleeve Nut
31	Bearing Housing (inboard)
* 32	Impeller Key
33	Bearing Housing (outboard)
* 38	Shaft Sleeve Gasket

ITEM No.	DESCRIPTION
40	Deflector (Liquid)
41	Bearing Cap (inboard)
43	Bearing Cap (outboard)
63	Stuffing Box Bushing
* 65	Mechanical Seal
68	Seal Collar
72	Thrust Collar
* 73	Casing Gasket - Suction Side (Not Shown)
* 73A	Casing Gasket - Discharge Side (Not Shown)
* 73D	Gasket (Seal Cap)
* 109	Interstage Diaphragm
127A	Seal Piping
192	Retaining Ring (Bearing)

(*) For Domestic Service we recommend these parts be carried in stock as spares
 (±) Double Wearing Rings furnished as special equipment ONLY.