Float Arrangement Diagram

Check the appropriate box for the float function (color code) used in your system.

☐ **(YG)RW** • *Factory Standard* •

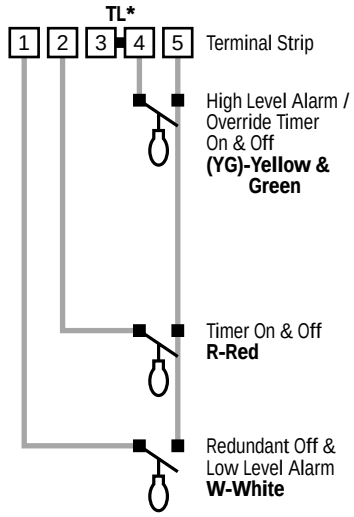

***Terminal Link Rail is required (factory installed).**

For a wire splicing illustration of the above diagram, request Splice Box Wiring Diagram:
EDW-SB-S-26

☐ **YRW**

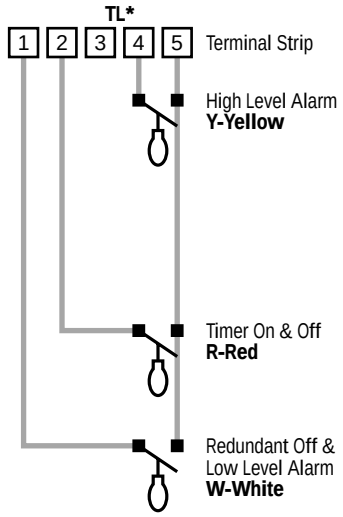

***Remove pre-installed Terminal Link Rail from terminals. See Panel Wiring Diagram for instructions.**

For a wire splicing illustration of the above diagram, request Splice Box Wiring Diagram:
EDW-SB-S-27

☐ **YGRW**

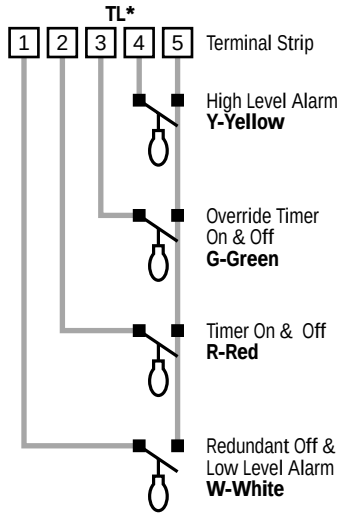

***Remove pre-installed Terminal Link Rail from terminals. See Panel Wiring Diagram for instructions.**

For a wire splicing illustration of the above diagram, request Splice Box Wiring Diagram:
EDW-SB-S-28

Float Types

Typical OSI float model: A
Specs: contact - normally open
differential - no minimum
power rating - signal
Possible substitutions: B,C,D

Orenco Systems®
Incorporated

814 AIRWAY AVENUE

SUTHERLIN, OREGON

97479-9012

TELEPHONE:

(541) 459-4449

FACSIMILE:

(541) 459-2884

Control Panel Series

MVP-S PTRO

Drawing No.

EDW-FA-S-10