Float Arrangement Diagram

Check the appropriate box for the float function (color code) used in your system.

☐ (YG)RW • *Factory Standard* •

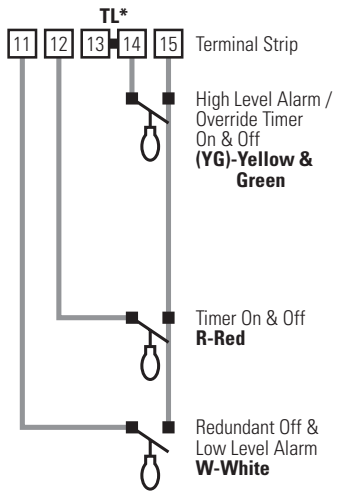

***Terminal Link Rail is required (factory installed).**

For a wire splicing illustration of the above diagram, request Splice Box Wiring Diagram:
EDW-SB-SSF-218

☐ YRW

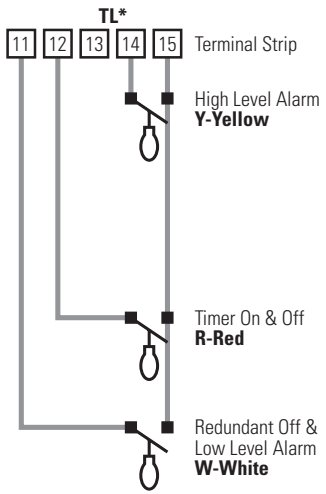

***Remove pre-installed Terminal Link Rail from terminals. See Panel Wiring Diagram for instructions.**

For a wire splicing illustration of the above diagram, request Splice Box Wiring Diagram:
EDW-SB-SSF-219

☐ YGRW

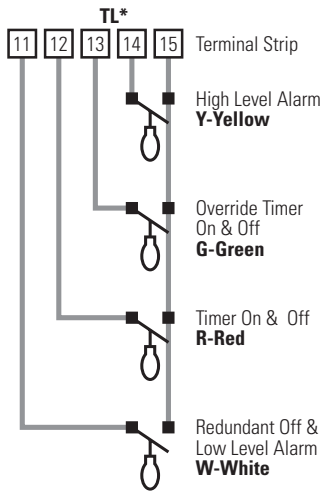

***Remove pre-installed Terminal Link Rail from terminals. See Panel Wiring Diagram for instructions.**

For a wire splicing illustration of the above diagram, request Splice Box Wiring Diagram:
EDW-SB-SSF-220

Float Types

Typical Orenco float model: A
Specs: contact - normally open
differential - no minimum
power rating - signal
Possible substitutions: B,C,D

Important: A high level condition in the sand filter will disable the septic tank pump in automatic mode.

Control Panel Series

MVP-SSF / PT RO **For use in two pump systems, sand filter side.**

Drawing No.

EDW-FA-SSF-210

Orenco Systems®
Incorporated

814 AIRWAY AVENUE
SUTHERLIN, OREGON
97479-9012

TELEPHONE:
(541) 459-4449

FACSIMILE:
(541) 459-2884

EDW-FA-SSF-210
Rev 1.2 © 08/28/02