# Float Arrangement Diagram

**Check the appropriate box for the float function (color code) used in your system.**

☐ **YBRW** • *Factory Standard* •

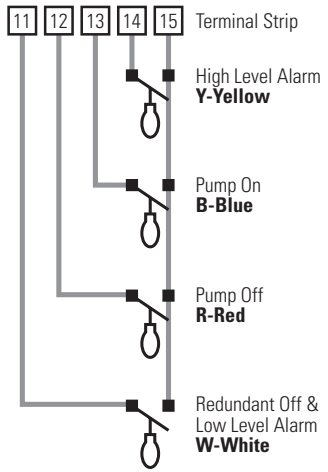


For a wire splicing illustration of the above diagram, request Splice Box Wiring Diagram: **EDW-SB-SSF-208**

☐ **YGW**

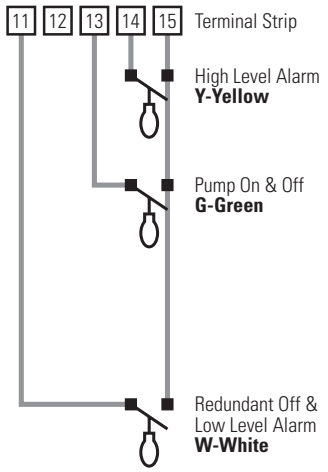


For a wire splicing illustration of the above diagram, request Splice Box Wiring Diagram: **EDW-SB-SSF-207**

## Float Types

**Typical Orenco float model:** A
**Specs:** contact - normally open
differential - no minimum
power rating - signal
**Possible substitutions:** B,C,D

**Important: A high level condition in the sand filter will disable the septic tank pump in automatic mode.**

**Control Panel Series**

**MVP-SSF /RO** **For use in two pump systems, sand filter side.**

**Drawing No.**

**EDW-FA-SSF-216**


Orenco Systems®
Incorporated

814 AIRWAY AVENUE
SUTHERLIN, OREGON
97479-9012

TELEPHONE:
(541) 459-4449

FACSIMILE:
(541) 459-2884



EDW-FA-SSF-216
Rev 2.2 © 05/3/05