



## TYPICAL BASIN MIXER INSTALLATION USING 4" I-BEAM

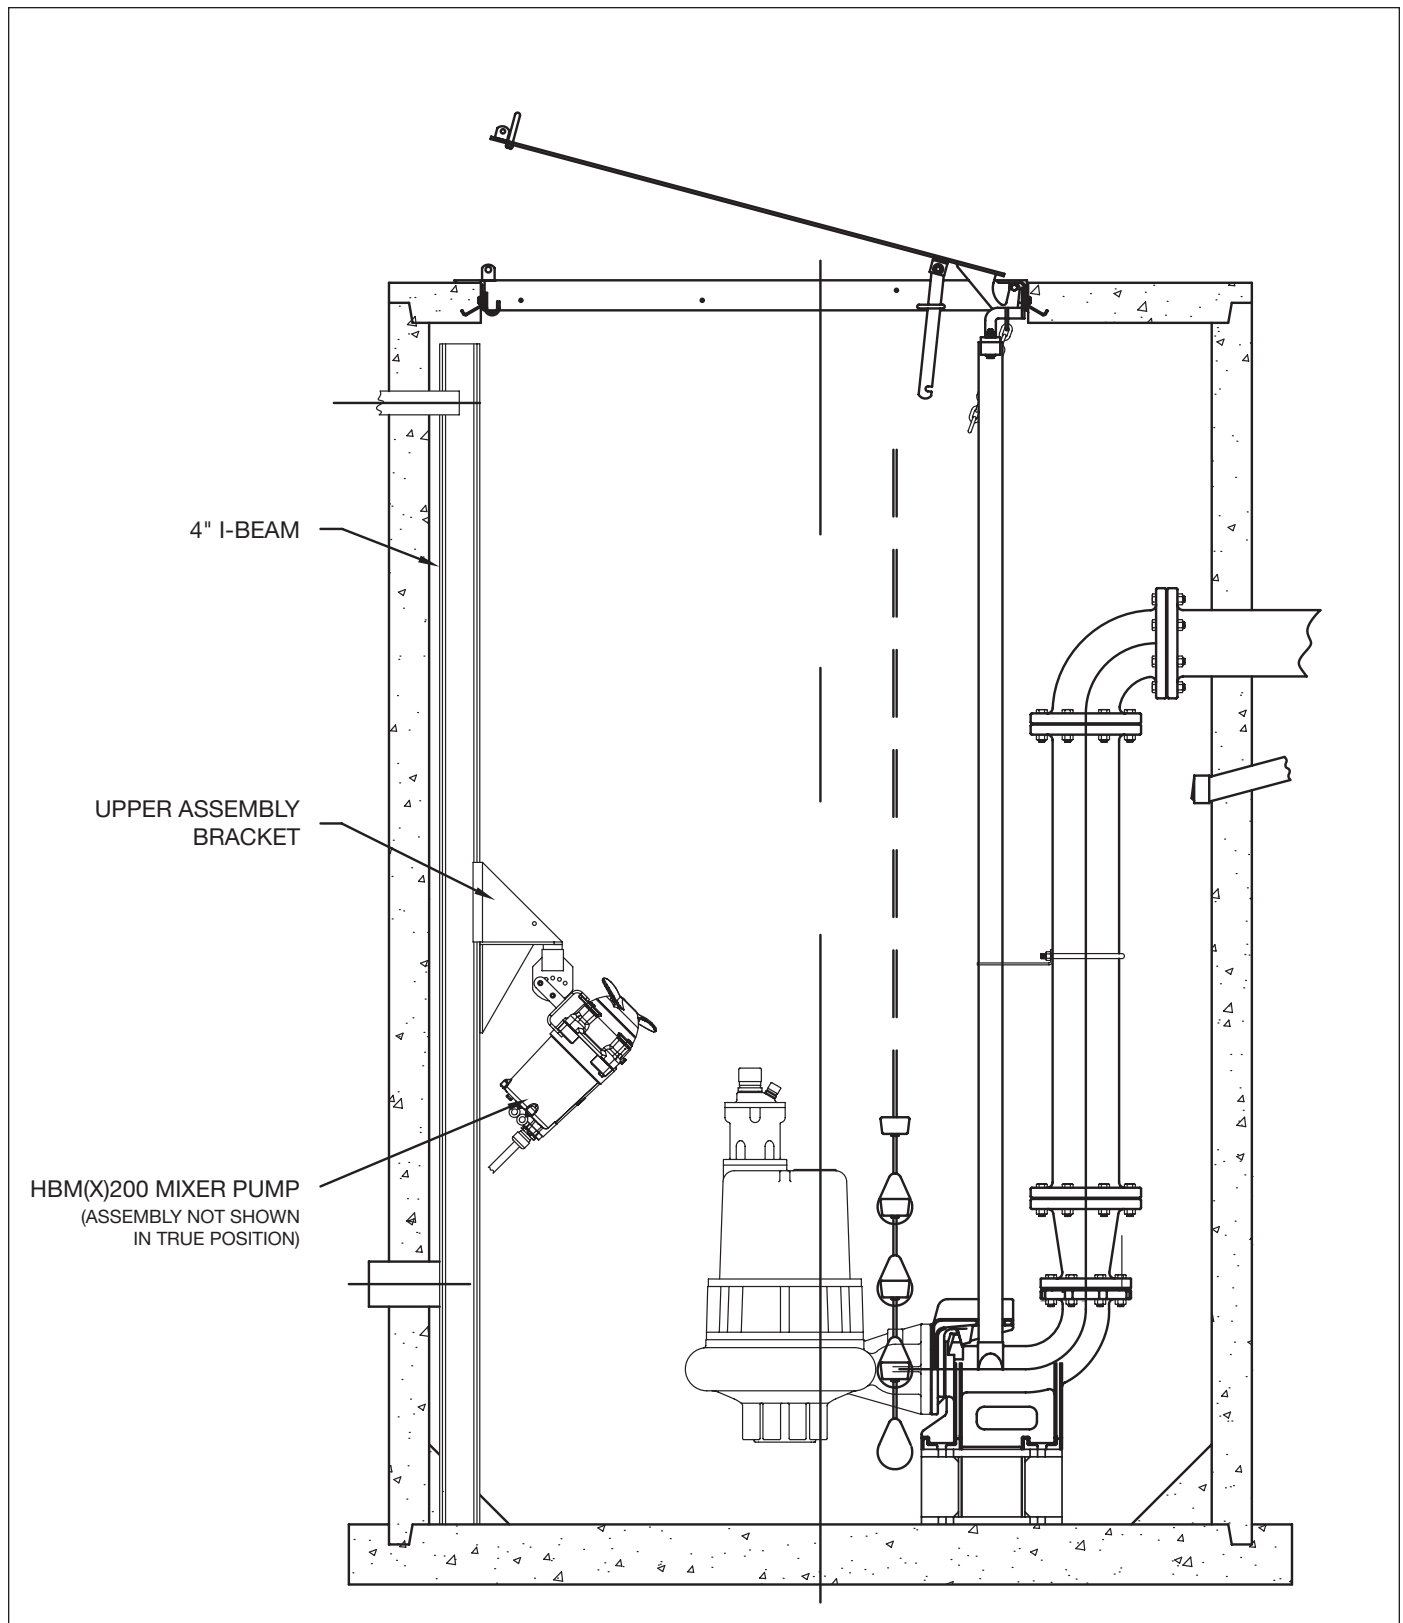

**TYPICAL BASIN MIXER INSTALLATION USING 1-1/2" PIPE**

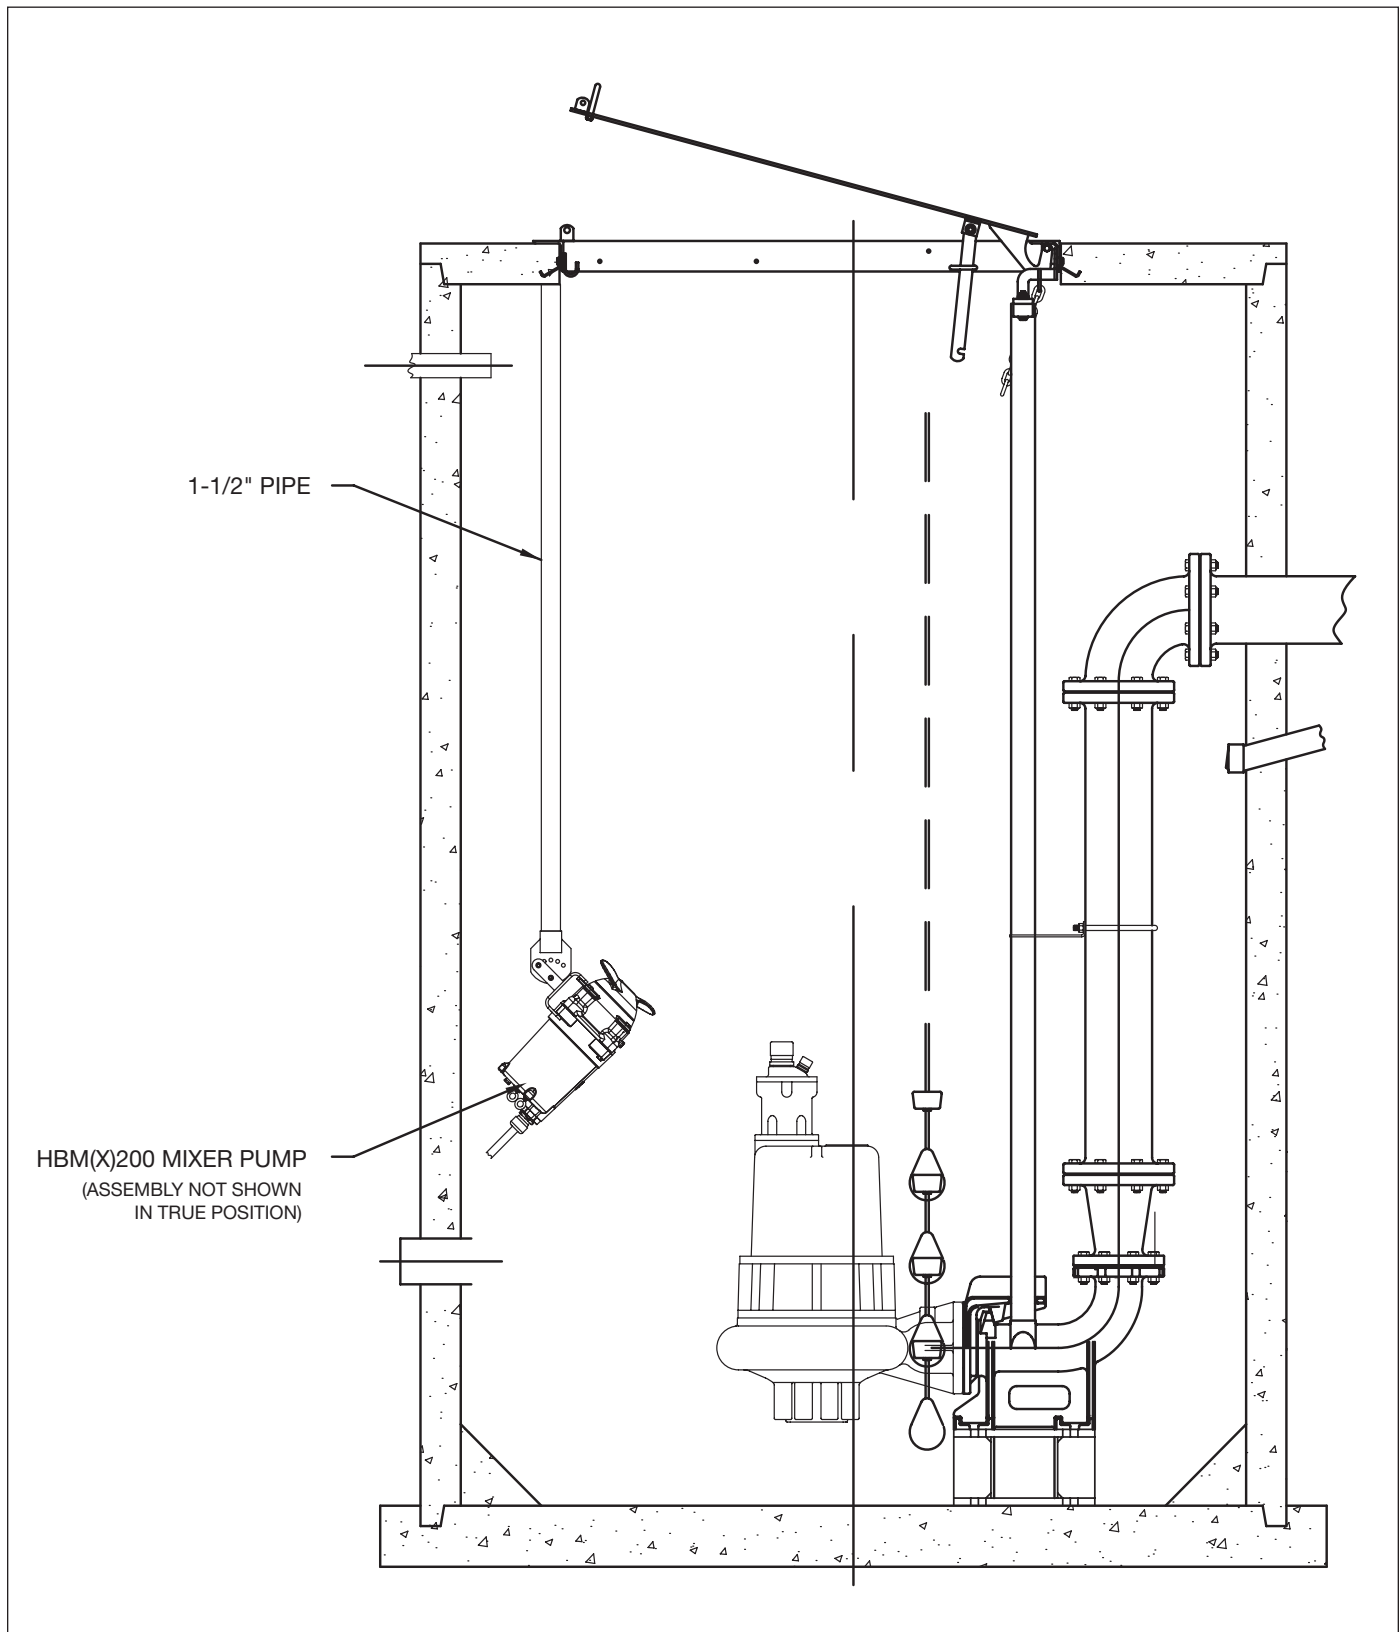

**Note:** Prior to installation the customer needs to purchase/supply a 1½" pipe threaded on both ends, cut to their desired length.

1. Attach the bracket to the concrete opening in the basin using the supplied anchors. It is recommended to use all four anchors when installing the bracket, but it is acceptable to anchor only the top two.
2. Attach the pipe noted above to the bail. Then attach the bail/pipe to the top of the mixer.
3. Lower the mixer into the basin with the mixer in the desired orientation. When lowering the mixer and the bail assembly, slide the bail's pins onto the already attached bracket.
4. The mixer is now mounted and easily accessible for any needed service in the future.

