
## **Splice Box Wiring Diagram**



814 AIRWAY AVENUE

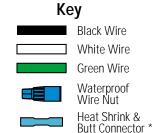

\* Refer to drawing EIN-SB-SB-1 for splicing instructions.

## SUTHERLIN, OREGON 97479-9012 TELEPHONE: (541) 459-4449

FACSIMILE: (541) 459-2884

## **Float Tag Colors**

**V** - Yellow

**P** - Purple

- Blue

- Green

R - Red

- Orange

- Grey

**W** - White

Note: Multi-function floats will have more than one marker

Attention: Failure to follow splicing instructions will void warranty

Pump Wires From Control Panel To Terminal Cord Grip Hand tighten each cord grip **High Level Alarm** so that the cord will not easily slide through the grommet. To Terminal P **Timer Override On Pump Cord** To Terminal **Timer Override Off** To Terminal Timer On & Off

**Control Panel Series** 

DAX PT

Float Function Color Code

**Splice Box Model** 

Drawing No.

Y(PB)(PR)R

SB<sub>5</sub>

EDW-SB-DAX-23

EDW-SB-DAX-23 Rev 1.2 @04/29/98