MVP-Time & Date Setting Instructions



Orenco's Most Versatile Panel (MVP) line of control panels includes an easy-to-use programmable logic unit that incorporates many timing and logic functions. The unit has been programmed at the factory for the control functions required. However, the time and date may need to be set.

To set the time and date, use the four arrow keys located on the face of the unit (up, down, left, and right), along with the "ESC" key and the "OK" key. Follow the three easy steps, below.


814 AIRWAY AVENUE SUTHERLIN, OREGON 97479-9012

TELEPHONE: (541) 459-4449

FACSIMILE:

(541) 459-2884


Setting The Time & Date:

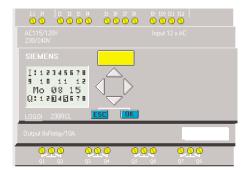

Step 1: The picture to the left shows the unit when it is in run mode. Press the "ESC" and "OK" keys <u>simultaneously</u> to begin the configuration process.



Step 2: Two options will be given. The arrow on the LCD display will point to "Set Clock." Press the "OK" key.

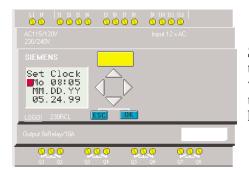

Step 3: Use the down arrow key to change the day. To change the time, month, day, and year values, scroll to the desired digit with the right and left arrow keys and change the digit with the up and down arrow keys. When the desired day, time, and date have been entered, press the "OK" key.